


INSTALLATION INSTRUCTION

Terminal shroud OZXB4K

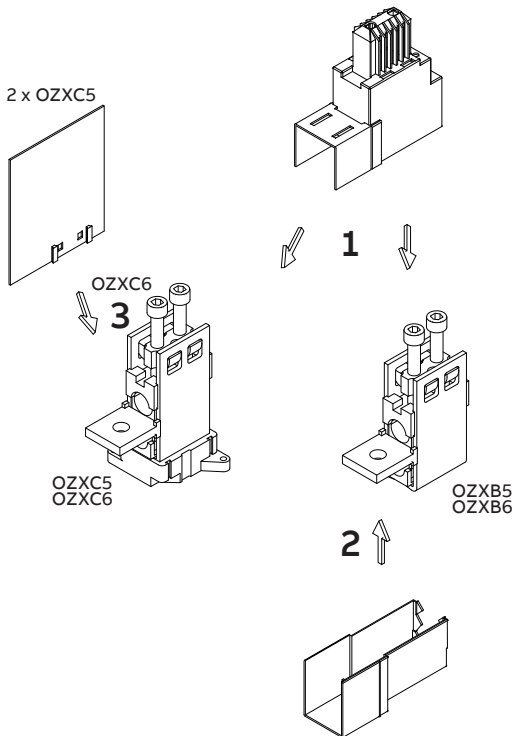



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage